

USER MANUAL

DIGITAL TORQUE WRENCH

PCE-TWT N SERIES

ENGLISH



User manuals in various languages (français, italiano, español, português, niederlands, türk, polski) can be found via our product search on:
www.pce-instruments.com

PRODUCT OVERVIEW

The mini digital wrench is designed in a miniaturized shape and is more suitable for the operation in a narrow space. Meanwhile, it has complete operating functions including torque setting function, unit setting function, numerical value storage function, numerical value eliminating function, numerical value output function and user correction function. It is easy to operate. The mini digital torque wrench is provided with the digital display screen, so that the requirement on operators is reduced. The mini digital torque wrench is suitable for fastening and controlling bolts in automobile industry, machinery industry.

FEATURES

- » It has a large screen and has the backlight function.
- » The clockwise accuracy is $\pm 2\%$, and the counterclockwise accuracy is 2.5% (20% to 100% of the full measuring range).
- » It can be operated both in the clockwise direction and the counterclockwise direction.
- » The buzzer and the LED indicator are triggered when reaching a preset torque value (peak-limited mode).
- » It has four engineering units (N.m, kgf.cm, lbf.ft, lbf.in).
- » It has three measuring modes, i.e. real-time mode, peak mode and preset mode.
- » It has 999 sets of storable record values.
- » It can be automatically powered off in 5 minutes.

DEVICE DESCRIPTION



- 1 - Ratchet Head
- 2 - Steering shifting sheet
- 3 - Quick separation button
- 4 - LCD screen
- 5 - Upward key
- 6 - Grip
- 7 - LED indicator lamp
- 8 - Power on / Zero clearing key
- 9 - Menu key
- 10 - Confirm key
- 11 - Downward key

NOTES BEFORE USE OF WRENCH

- » Press the key P to turn on the power of the wrench
- » After the power is turned on and before the use, press the key P to reset the wrench
- » If there is already an external force applied to the wrench before the wrench is powered on, after turn on the power/reset, there is a deviation value displayed on the screen.
- » N.m is unit and is loaded from EEPROM. Once the unit or mode is changed by the user, EEPROM will exist forever.
- » The wrench is awakened when in sleeping
- » In order to save the power, when there is no operation, the wrench will enter the sleep mode in about 5 minutes. Press key P to awaken the wrench.
- » Low-voltage protection
- » If the system detects that the battery voltage is less than 2.2V, the wrench will be automatically powered off.

PRODUCT SPECIFICATION

Model (with no communication)	PCE-TWT 10N	PCE-TWT 30N	PCE-TWT 60N	PCE-TWT 100N	PCE-TWT 135N
Minimum division value	0.01			0.1	
Maximum operating range (N.m)	10N.m / 7.37ft.lb / 88.50in.lb / 101.97kgf.cm	30N.m / 22.12ft.lb / 265.5in.lb / 305.91kgf.cm	60N.m / 44.25 ft.lb / 531.04in.lb / 611.82kgf.cm	100N.m / 73.7ft.lb / 885.0in.lb / 1019.7kgf.cm	135N.m / 9 9.6ft.lb / 1194in.lb / 1377kgf.cm
Connector (inches)	1/4		3/8	1/2	
Setting range of buzzer (N.m)	0.3 ... 10	0.9 ... 30	1.8 ... 60	3 ... 100	4 ... 135
Length (mm)	230		240	285	388
Accuracy*1	Clockwise: ±2% Counterclockwise: ±2.5%				
Data storage capacity	999				
Operating mode	Peak mode(P) / Real-time mode (T) / Preset mode (Pre)				

Unit	N.m, kgf.cm, lbf.ft, lbf.in
Form of ratchet head	Bidirectional ratchet head
Number of ratchet teeth	72 teeth
Number of keys	5
Battery	2xAAA batteries
Operating temperature	-10°C ... 60°C
Storage temperature	-20°C ... 70°C
Test falling height	1m
Vibration test condition*2	10G
Service life test*3	10000 times

Note:

*1 - The accuracy is ensured to be in a range of 20% to 100% of the maximum operating value. The torque accuracy is a normal value. The correction accuracy adopts an intermediate groove of five grooves on a grip as a correction point. In order to ensure the accuracy, it is suggested to correct once a year.

*2 - The service life test includes the horizontal test and vertical test.

*3 - One time refers to the process of applying the force from ON.m to the maximum operating value of the wrench and then returning to ON.m.

USE METHOD

Power on

Shortly press key P key to power on. After the starting, if the power is insufficient, it will be automatically powered off. After the battery is replaced, the wrench can be used normally.

Unit switching

At the power-on state, on the use interface rather than the non-set interface, press key U/S to switch the four engineering units.

Mode switching

At the power-on state, press key UP to switch the mode. The digital torque wrench has real-time mode T/ peak mode P/preset mode Pre.

Real-time mode

At the real-time measuring mode, the applied torque value shall be tracked in real time. When the torque is unloaded, the torque value is automatically returned to zero. When T is displayed on the liquid crystal display, it is the real-time mode. Press key UP to switch the working mode.

Peak mode

At the peak measuring mode, when the torque is applied, the maximum torque shall be locked to the wrench and displayed on the liquid crystal screen. When the torque is unloaded, the peak torque is locked. When the torque is re-loaded, the LCD liquid crystal screen will not update the locked peak value. The liquid display screen displays P which is the peak mode. Press key UP to switch the working mode.

Preset mode

At the power-on state, long press the key DOWN to enter the setting of preset numerical value, then press the key UP to add the target value or press the key DOWN to reduce the target value or the preset value. After the setting is completed, press the key U to save/exit. After the buzzer is powered on, and when the preset target torque value is reached, the buzzer buzzes for a long time, and the red light is on for a long time. Press the key UP to switch the preset mode.

Zero clearing

At the measuring mode, press the key P to directly reset the force value. At the preset or peak mode, press the key P to reset a peak maintaining value.

Data saving

At the measuring interface, shortly press the key M, when Succ is displayed, it means the success in saving. When FAIL is displayed, it means the failure in saving. When the force value is zero, it cannot be saved, and there is the prompt of FAIL.

Data viewing

Press the key P to power on or at the power-on use interface, long press the key M to view the saved data. At the data viewing interface, the saving record can be viewed through the key UP or DOWN. After the viewing, shortly press the key M to exit.

Data deletion

Press the key P to power on or at the power-on measuring interface, long press the key M to display the saved data. Press the key U to select the deleting way. ALL indicates deleting all at one time. ONE indicates gradually deleting the data one by one. After the deleting way is selected, finally press the key P to delete the saved data.

Factory setting restoring

By using this function, the user can restore the factory settings of the instrument. Long press the key U to enter the system menu. Shortly press the key U to select RESET menu, and then press the key UP to select the number 1 or 0. If the factory settings are restored, select 1 and shortly press the key U to exit the system menu, that is, the product is already restored to the factory settings. If the factory setting is not restored, select 0, and then shortly press the key U to exit the system menu.

Buzzer function

Long press the key U to enter the system menu. Then shortly press the key U to select the item BUZZ. Shortly press the key UP to select whether to start the buzzer. If the buzzer is to be started, select 1, and then shortly press the key U to exit the system menu, that is, the buzzer is already started. If the buzzer is not to be started, select 0, and then shortly press the key U to exit the system menu.

MAINTENANCE AND STORAGE

- » The calibration period shall be conducted once a year.
- » The over-torque may lead to the damage or accuracy loss. Do not exceed 120% of the maximum torque.
- » Do not violently shake the wrench, drop the wrench on the floor or use the wrench as the hammer to knock at will.
- » When the battery power is low, replace the battery in time, please.
- » Do not place the wrench at the place at high temperature and high humidity or with direct sunlight.
- » Do not use the wrench nearby the water
- » If the wrench is carelessly wetted, wipe dry the wrench with dry towel immediately.
- » Do not clean the wrench with organic solvent such as alcohol or paint diluting agent.
- » Do not approach the wrench to a magnetic object.
- » Do not place the wrench at the place with a lot of dust or sand, otherwise, it will severely damage the wrench.
- » Do not heavily press the LCD screen.

DISPOSAL

For the disposal of batteries in the EU, the (EU) 2023/1542 directive of the European Parliament applies. Due to the contained pollutants, batteries must not be disposed of as household waste. They must be given to collection points designed for that purpose. In order to comply with the EU directive 2012/19/EU we take our devices back. We either re-use them or give them to a recycling company which disposes of the devices in line with law. For countries outside the EU, batteries and devices should be disposed of in accordance with your local waste regulations. If you have any questions, please contact PCE Instruments.

PCE INSTRUMENTS CONTACT INFORMATION

Germany

PCE Deutschland GmbH
Im Langel 26
D-59872 Meschede
Deutschland
Tel.: +49 (0) 2903 976 99 0
Fax: +49 (0) 2903 976 99 29
info@pce-instruments.com
www.pce-instruments.com/deutsch

France

PCE Instruments France EURL
2, rue Georges Kuhnmmunch
67250 Soultz-sous-Forêts
France
Tel.: +33 (0) 972 35 37 17
Fax: +33 (0) 972 35 37 18
info@pce-france.fr
www.pce-instruments.com/french

Spain

PCE Ibérica S.L.
Calle Mula, 8
02500 Tobarra (Albacete)
España
Tel.: +34 967 543 548
info@pce-iberica.es
www.pce-instruments.com/espanol

United Kingdom

PCE Instruments UK Ltd
Trafford House
Chester Rd, Old Trafford
Manchester M32 0RS
United Kingdom
Tel: +44 (0) 161 464902 0
Fax: +44 (0) 161 464902 9
info@pce-instruments.co.uk
www.pce-instruments.com/english

Italy

PCE Italia s.r.l.
Via Pesciatina 878 / B-Interno 6
55010 Loc. Gragnano
Capannori (Lucca)
Italia
Telefono: +39 0583 975 114
Fax: +39 0583 974 824
info@pce-italia.it
www.pce-instruments.com/italiano

Turkey

PCE Teknik Cihazları Ltd.Şti.
Halkalı Merkez Mah.
Pehlivan Sok. No.6/C
34303 Küçükçekmece - İstanbul
Türkiye
Tel: 0212 471 11 47
Faks: 0212 705 53 93
info@pce-cihazlari.com.tr
www.pce-instruments.com/turkish

The Netherlands

PCE Brookhuis B.V.
Twentepoort West 17
7609 RD Almelo
Nederland
Telefoon: +31 (0)53 737 01 92
info@pcebenelux.nl
www.pce-instruments.com/dutch

United States of America

PCE Americas Inc.
1201 Jupiter Park Drive, Suite 8
Jupiter / Palm Beach
33458 FL
USA
Tel: +1 (561) 320-9162
Fax: +1 (561) 320-9176
info@pce-americas.com
www.pce-instruments.com/us

Denmark

PCE Instruments Denmark ApS
Birk Centerpark 40
7400 Herning
Denmark
Tel.: +45 70 30 53 08
kontakt@pce-instruments.com
www.pce-instruments.com/dansk



Subject to change without notice